

## RUGGEDCOM RMC40

### Installation Guide

Preface	
Introduction	1
Installing the Device	2
Communication Ports	3
Technical Specifications	4
Certification	5

Copyright © 2019 Siemens Canada Ltd

All rights reserved. Dissemination or reproduction of this document, or evaluation and communication of its contents, is not authorized except where expressly permitted. Violations are liable for damages. All rights reserved, particularly for the purposes of patent application or trademark registration.

This document contains proprietary information, which is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced or translated to another language without the prior written consent of Siemens Canada Ltd.

## » Disclaimer Of Liability

Siemens has verified the contents of this document against the hardware and/or software described. However, deviations between the product and the documentation may exist.

Siemens shall not be liable for any errors or omissions contained herein or for consequential damages in connection with the furnishing, performance, or use of this material.

The information given in this document is reviewed regularly and any necessary corrections will be included in subsequent editions. We appreciate any suggested improvements. We reserve the right to make technical improvements without notice.

## » Registered Trademarks

RUGGEDCOM™ and ROS™ are trademarks of Siemens Canada Ltd.

Other designations in this manual might be trademarks whose use by third parties for their own purposes would infringe the rights of the owner.

## » Security Information

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, machines, equipment and/or networks. They are important components in a holistic industrial security concept. With this in mind, Siemens' products and solutions undergo continuous development. Siemens recommends strongly that you regularly check for product updates.

For the secure operation of Siemens products and solutions, it is necessary to take suitable preventive action (e.g. cell protection concept) and integrate each component into a holistic, state-of-the-art industrial security concept. Third-party products that may be in use should also be considered. For more information about industrial security, visit <https://www.siemens.com/industrialsecurity>.

To stay informed about product updates as they occur, sign up for a product-specific newsletter. For more information, visit <https://support.automation.siemens.com>.

## » Warranty

Siemens warrants this product for a period of five (5) years from the date of purchase, conditional upon the return to factory for maintenance during the warranty term. This product contains no user-serviceable parts. Attempted service by unauthorized personnel shall render all warranties null and void. The warranties set forth in this article are exclusive and are in lieu of all other warranties, performance guarantees and conditions whether written or oral, statutory, express or implied (including all warranties and conditions of merchantability and fitness for a particular purpose, and all warranties and conditions arising from course of dealing or usage or trade). Correction of nonconformities in the manner and for the period of time provided above shall constitute the Seller's sole liability and the Customer's exclusive remedy for defective or nonconforming goods or services whether claims of the Customer are based in contract (including fundamental breach), in tort (including negligence and strict liability) or otherwise.

For warranty details, visit <https://www.siemens.com/ruggedcom> or contact a Siemens customer service representative.

## » Contacting Siemens

### Address

Siemens Canada Ltd  
Industry Sector  
300 Applewood Crescent  
Concord, Ontario  
Canada, L4K 5C7

### Telephone

Toll-free: 1 888 264 0006  
Tel: +1 905 856 5288  
Fax: +1 905 856 1995

### E-mail

[ruggedcom.info.i-ia@siemens.com](mailto:ruggedcom.info.i-ia@siemens.com)

### Web

<https://www.siemens.com/ruggedcom>

# Table of Contents

Preface .....	v
Alerts .....	v
Training .....	vi
Customer Support .....	vi
Chapter 1	
Introduction .....	1
1.1 Feature Highlights .....	1
1.2 Description .....	2
1.3 Required Tools and Materials .....	3
1.4 Supported Fiber Optic Cables .....	3
1.5 Decommissioning and Disposal .....	4
Chapter 2	
Installing the Device .....	5
2.1 General Procedure .....	5
2.2 Unpacking the Device .....	6
2.3 Mounting the Device .....	6
2.3.1 Mounting the Device on a DIN Rail .....	7
2.3.2 Mounting the Device to a Panel .....	7
2.4 Connecting Power .....	8
2.4.1 Connecting AC Power .....	9
2.4.2 Connecting DC Power .....	10
Chapter 3	
Communication Ports .....	13
3.1 Copper Ethernet Ports .....	13
3.2 Fiber Optic Ethernet Ports .....	15
Chapter 4	
Technical Specifications .....	17
4.1 Power Supply Specifications .....	17
4.2 Copper Ethernet Port Specifications .....	17
4.3 Fiber Optic Ethernet Port Specifications .....	18
4.4 Supported Networking Standards .....	19
4.5 Operating Environment .....	19

4.6 Mechanical Specifications ..... 19

4.7 Dimension Drawings ..... 19

Chapter 5

**Certification ..... 21**

5.1 Approvals ..... 21

5.1.1 CSA ..... 21

5.1.2 European Union (EU) ..... 22

5.1.3 FCC ..... 22

5.1.4 FDA/CDRH ..... 22

5.1.5 ISED ..... 22

5.1.6 ACMA ..... 23

5.1.7 RoHS ..... 23

5.1.8 Other Approvals ..... 23

5.2 EMC and Environmental Type Tests ..... 24

# Preface

This guide describes the RUGGEDCOM RMC40. It describes the major features of the device, installation, commissioning and important technical specifications.

It is intended for use by network technical support personnel who are responsible for the installation, commissioning and maintenance of the device. It is also recommended for use by network and system planners, system programmers, and line technicians.

## CONTENTS

- [“Alerts”](#)
- [“Training”](#)
- [“Customer Support”](#)

## Alerts

The following types of alerts are used when necessary to highlight important information.



### **DANGER!**

*DANGER alerts describe imminently hazardous situations that, if not avoided, will result in death or serious injury.*



### **WARNING!**

*WARNING alerts describe hazardous situations that, if not avoided, may result in serious injury and/or equipment damage.*



### **CAUTION!**

*CAUTION alerts describe hazardous situations that, if not avoided, may result in equipment damage.*



### **IMPORTANT!**

*IMPORTANT alerts provide important information that should be known before performing a procedure or step, or using a feature.*



### **NOTE**

*NOTE alerts provide additional information, such as facts, tips and details.*

# Training

Siemens offers a wide range of educational services ranging from in-house training of standard courses on networking, Ethernet switches and routers, to on-site customized courses tailored to the customer's needs, experience and application.

Siemens' Educational Services team thrives on providing our customers with the essential practical skills to make sure users have the right knowledge and expertise to understand the various technologies associated with critical communications network infrastructure technologies.

Siemens' unique mix of IT/Telecommunications expertise combined with domain knowledge in the utility, transportation and industrial markets, allows Siemens to provide training specific to the customer's application.

For more information about training services and course availability, visit <https://www.siemens.com/ruggedcom> or contact a Siemens Sales representative.


# Customer Support

Customer support is available 24 hours, 7 days a week for all Siemens customers. For technical support or general information, contact Siemens Customer Support through any of the following methods:



## Online

Visit <http://www.siemens.com/automation/support-request> to submit a Support Request (SR) or check on the status of an existing SR.

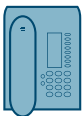

## Telephone

Call a local hotline center to submit a Support Request (SR). To locate a local hotline center, visit <http://www.automation.siemens.com/mcms/aspa-db/en/automation-technology/Pages/default.aspx>.



## Mobile App

Install the Industry Online Support app by Siemens AG on any Android, Apple iOS or Windows mobile device and be able to:

- Access Siemens' extensive library of support documentation, including FAQs and manuals
- Submit SRs or check on the status of an existing SR
- Contact a local Siemens representative from Sales, Technical Support, Training, etc.
- Ask questions or share knowledge with fellow Siemens customers and the support community

# 1 Introduction

The RUGGEDCOM RMC40 is a 4-port, unmanaged Ethernet switch that provides both copper-to-fiber media conversion as well as 10 Mbps to 100 Mbps speed conversion. Specifically designed to operate reliably in electrically and climatically harsh environments, it is well suited for use in mission critical Ethernet networking applications.

The RUGGEDCOM RMC40 is packaged in a compact, galvanized steel enclosure that allows either DIN or panel mounting for efficient use of cabinet space. It has an integrated power supply with a wide range of voltages for worldwide operability. An operating temperature range of -40 to 80 °C (-40 to 176 °F) without the use of internal cooling fans allows it to be placed in almost any location. The RUGGEDCOM RMC40 is compliant with EMI and environmental standards for utility substations, industrial manufacturing, process and control and intelligent transportation systems applications.

The versatility and wide selection of fiber optics allows the RUGGEDCOM RMC40 to be used in a variety of applications. It can be used in place of traditional copper-to-fiber media converters with the added ability to convert speed from 10Mbps to 100Mbps. With dual fiber optics, daisy chaining of Ethernet enabled devices can easily be accomplished. For the most demanding of systems, a dual-redundant fiber optic connection can be created for a device that only offers a single 10/100Base-TX port.

## CONTENTS

- [Section 1.1, "Feature Highlights"](#)
- [Section 1.2, "Description"](#)
- [Section 1.3, "Required Tools and Materials"](#)
- [Section 1.4, "Supported Fiber Optic Cables"](#)
- [Section 1.5, "Decommissioning and Disposal"](#)

### Section 1.1

## Feature Highlights

### Ethernet Ports with Optional Dual Fiber Optics

- Three configurations to choose from:
  - 2 x 10/100Base-TX ports and 1 x 100Base-FX port (SC/ST)
  - 2 x 10/100Base-TX ports and 2 x 100Base-FX port (MTRJ/LC)
  - 4 x 10/100Base-TX ports
- Multi-mode and single-mode optical transceivers
- Industry standard fiber optical connectors: LC, SC, ST, MTRJ
- Long haul optics allow distances from 20 to 90 km (12 to 56 mi)

### Designed for Harsh Environments

- Operates over a temperature range of -40 to 80 °C (-40 to 176 °F) without the use of fans for improved reliability
- 21 AWG galvanized steel enclosure suitable for DIN or panel mounting provide secure mechanical reliability

### Simple Plug and Play Operation

- Automatic learning of up to 2048 MAC addresses
- Auto-negotiation on 10/100Base-TX ports simplifies setup
- Auto-MDI/MDIX on all 10/100Base-TX ports eliminates need for crossover cables
- LED indicators for link, activity, and speeds LED aids in field trouble-shooting


### High Performance Ethernet Switching

- Full compliance with IEEE 802.3 and IEEE 802.3u Ethernet standards for universal interoperability
- Non-blocking, store and forward switching with only 10 us latency means high network throughput
- Full duplex operation results in no collisions and deterministic network response and flow control via IEEE 802.3x pause frames results in no collisions or dropped packet

## Section 1.2

# Description

The RUGGEDCOM RMC40 features various ports, controls and indicator LEDs on the display panel for connecting, configuring and troubleshooting the device. The display panel can be located on the rear, front or top of the device, depending on the mounting configuration.

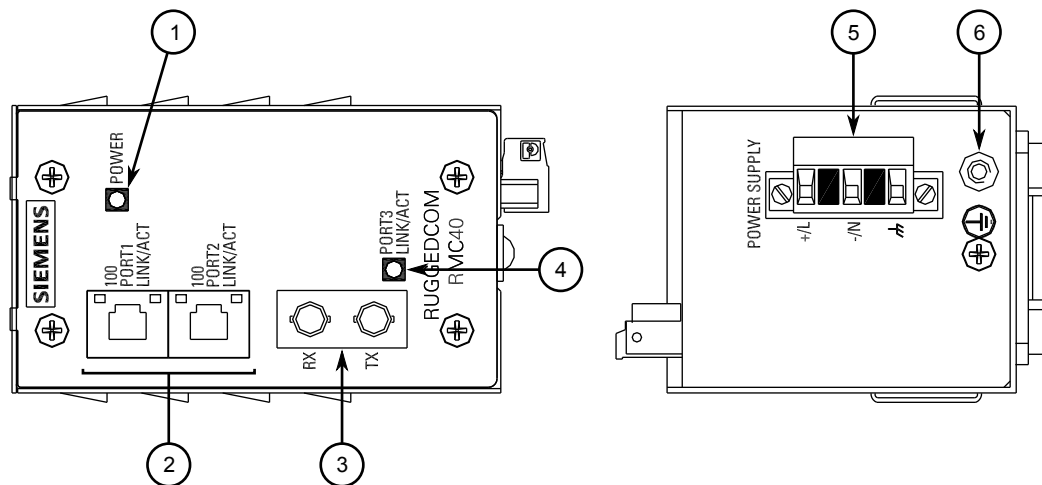

**Figure 1: RUGGEDCOM RMC40**

1. POWER LED 2. Copper Ethernet Port with LEDs 3. Fiber Optic Ethernet Port (ST Port Shown) 4. LINK/ACT LED 5. Power Terminal Block 6. Chassis Ground Terminal

#### POWER LED

Illuminates when power is being supplied to the device.



	State	Description
	Green	Power is on
	Off	Power is off
<b>LINK/ACT LED</b>	Indicate the connection status of the fiber optic Ethernet ports.	
	State	Description
	Yellow (Solid)	Link is established
	Yellow (Blinking)	Port activity
<b>Power Supply Terminal</b>	A pluggable terminal. For more information, refer to: <ul style="list-style-type: none"><li>• <a href="#">Section 2.4, “Connecting Power”</a></li><li>• <a href="#">Section 4.1, “Power Supply Specifications”</a></li></ul>	
<b>Communication Ports</b>	Receive and transmit data. For more information about the various ports available for the RUGGEDCOM RMC40, refer to <a href="#">Chapter 3, Communication Ports</a> .	

## Section 1.3

## Required Tools and Materials

The following tools and materials are required to install the RUGGEDCOM RMC40:

Tools/Materials	Purpose
AC or DC power cord (16 AWG)	For connecting power to the device.
CAT-5 Ethernet cables	For connecting the device to the network.
Flathead screwdriver	For mounting the device to a DIN rail.
Phillips screwdriver	For mounting the device to a panel.
4 x #8-32 screws	For mounting the device to a panel.

## Section 1.4

## Supported Fiber Optic Cables

The following fiber optic cable types are supported under the stated conditions.

Cable Type	Wavelength (nm)	Modal Bandwidth (MHz·km)	Distance (m)		
			100Base-FX	1000Base-SX	10GBase-SR
OM1 (62.5/125)	850	200	—	275	33
	1300	500	2000	—	—
OM2 (50/125)	850	500	—	550	82
	1300	500	2000	—	—
OM3 (50/125) <sup>a</sup>	850	1500	—	550	300

Cable Type	Wavelength (nm)	Modal Bandwidth (MHz·km)	Distance (m)		
			100Base-FX	1000Base-SX	10GBase-SR
OM4 (50/125) <sup>a</sup>	1300	500	2000	—	—
	850	3500	—	550	400
	1300	500	2000	—	—

<sup>a</sup> Laser optimized.

## Section 1.5

# Decommissioning and Disposal

Proper decommissioning and disposal of this device is important to prevent malicious users from obtaining proprietary information and to protect the environment.

## » Decommissioning

This device may include sensitive, proprietary data. Before taking the device out of service, either permanently or for maintenance by a third-party, make sure it has been fully decommissioned.

For more information, refer to the associated *User Guide*.

## » Recycling and Disposal

For environmentally friendly recycling and disposal of this device and related accessories, contact a facility certified to dispose of waste electrical and electronic equipment. Recycling and disposal must be done in accordance with local regulations.

# 2 Installing the Device

The following sections describe how to install the device, including mounting the device, installing/removing modules, connecting power, and connecting the device to the network.



## DANGER!

*Electrocution hazard – risk of serious personal injury and/or damage to equipment. Before performing any maintenance tasks, make sure all power to the device has been disconnected and wait approximately two minutes for any remaining energy to dissipate.*



## WARNING!

*Radiation hazard – risk of serious personal injury. This product contains a laser system and is classified as a **CLASS 1 LASER PRODUCT**. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.*



## IMPORTANT!

*This product contains no user-serviceable parts. Attempted service by unauthorized personnel shall render all warranties null and void.*

*Changes or modifications not expressly approved by Siemens Canada Ltd could invalidate specifications, test results, and agency approvals, and void the user's authority to operate the equipment.*



## IMPORTANT!

*This product should be installed in a **restricted access location** where access can only be gained by authorized personnel who have been informed of the restrictions and any precautions that must be taken. Access must only be possible through the use of a tool, lock and key, or other means of security, and controlled by the authority responsible for the location.*

## CONTENTS

- [Section 2.1, "General Procedure"](#)
- [Section 2.2, "Unpacking the Device"](#)
- [Section 2.3, "Mounting the Device"](#)
- [Section 2.4, "Connecting Power"](#)

### Section 2.1

## General Procedure

The general procedure for installing the device is as follows:



**IMPORTANT!**

*The user is responsible for the operating environment of the device, including maintaining the integrity of all protective conductor connections and checking equipment ratings. Make sure to review all operating and installation instructions before commissioning or performing maintenance on the device.*

1. Review the relevant certification information for any regulatory requirements. For more information, refer to [Section 5.1, “Approvals”](#).
2. Mount the device.
3. Set the operating mode.
4. Connect power to the device and ground the device to safety Earth.
5. Connect the device to the network.
6. Configure the device.

Section 2.2

## Unpacking the Device

When unpacking the device, do the following:

1. Inspect the package for damage before opening it.
2. Visually inspect each item in the package for any physical damage.
3. Verify all items are included.



**IMPORTANT!**

*If any item is missing or damaged, contact Siemens for assistance.*

Section 2.3

## Mounting the Device

The RUGGEDCOM RMC40 is designed for maximum mounting and display flexibility. It can be equipped with connectors that allow it to be installed in a 35 mm (1.4 in) DIN rail or directly on a panel.



**IMPORTANT!**

*Heat generated by the device is channeled outwards from the enclosure. As such, it is recommended that 2.5 cm (1 in) of space be maintained on all open sides of the device to allow for some convectional airflow.*

*Forced airflow is not required. However, any increase in airflow will result in a reduction of ambient temperature and improve the long-term reliability of all equipment mounted in the rack space.*



#### NOTE

For detailed dimensions of the device with either DIN rail or panel hardware installed, refer to [Section 4.7, "Dimension Drawings"](#).

#### CONTENTS

- [Section 2.3.1, "Mounting the Device on a DIN Rail"](#)
- [Section 2.3.2, "Mounting the Device to a Panel"](#)


#### Section 2.3.1

## Mounting the Device on a DIN Rail

For DIN rail installations, the RMC40 can be equipped with a DIN rail bracket pre-installed on the back of the chassis. The bracket allows the device to be slid onto a standard 35 mm (1.4 in) DIN rail.

To mount the device to a DIN rail, do the following:

1. Align the slot in the bracket with the DIN rail.

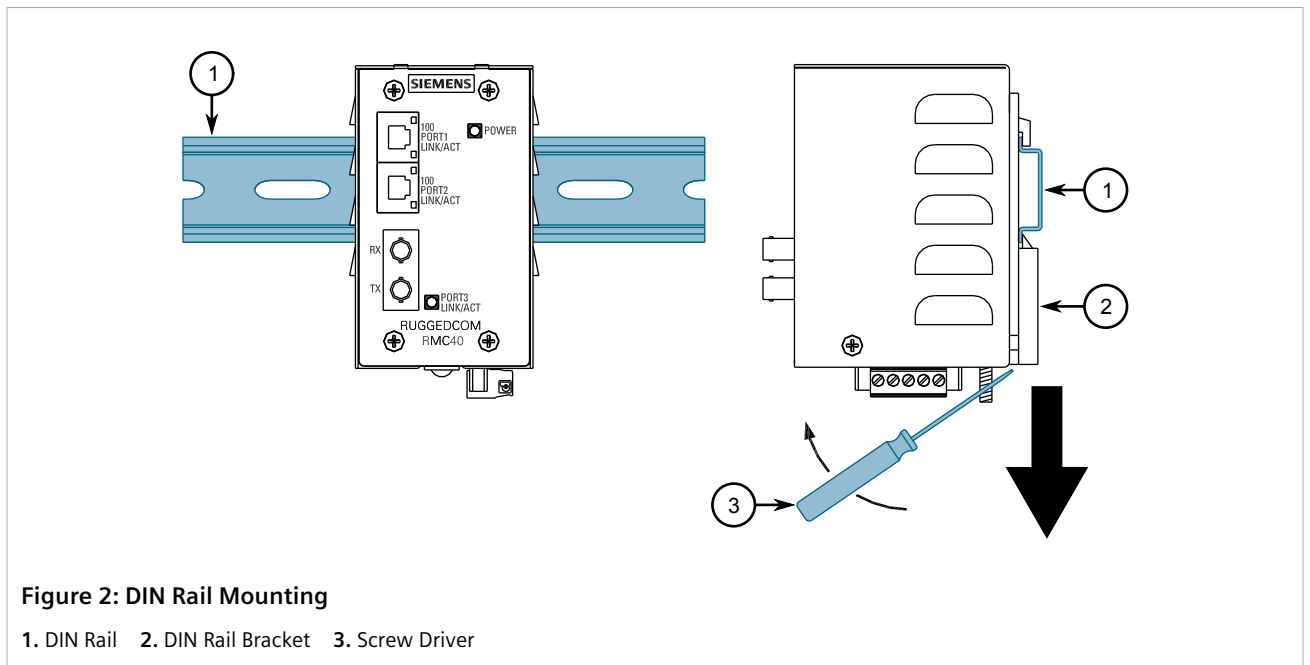

2. Pull the release on the bracket down and slide the device onto the DIN rail. If necessary, use a screw driver to unlock the release. Let go of the release to lock the device in position.


#### Section 2.3.2

## Mounting the Device to a Panel

To mount the device to a panel, do the following:

1. Disassemble the device and panel adapter.
  - a. Remove the screw at the bottom of the adapter.

- b. Pull the device out of the adapter.

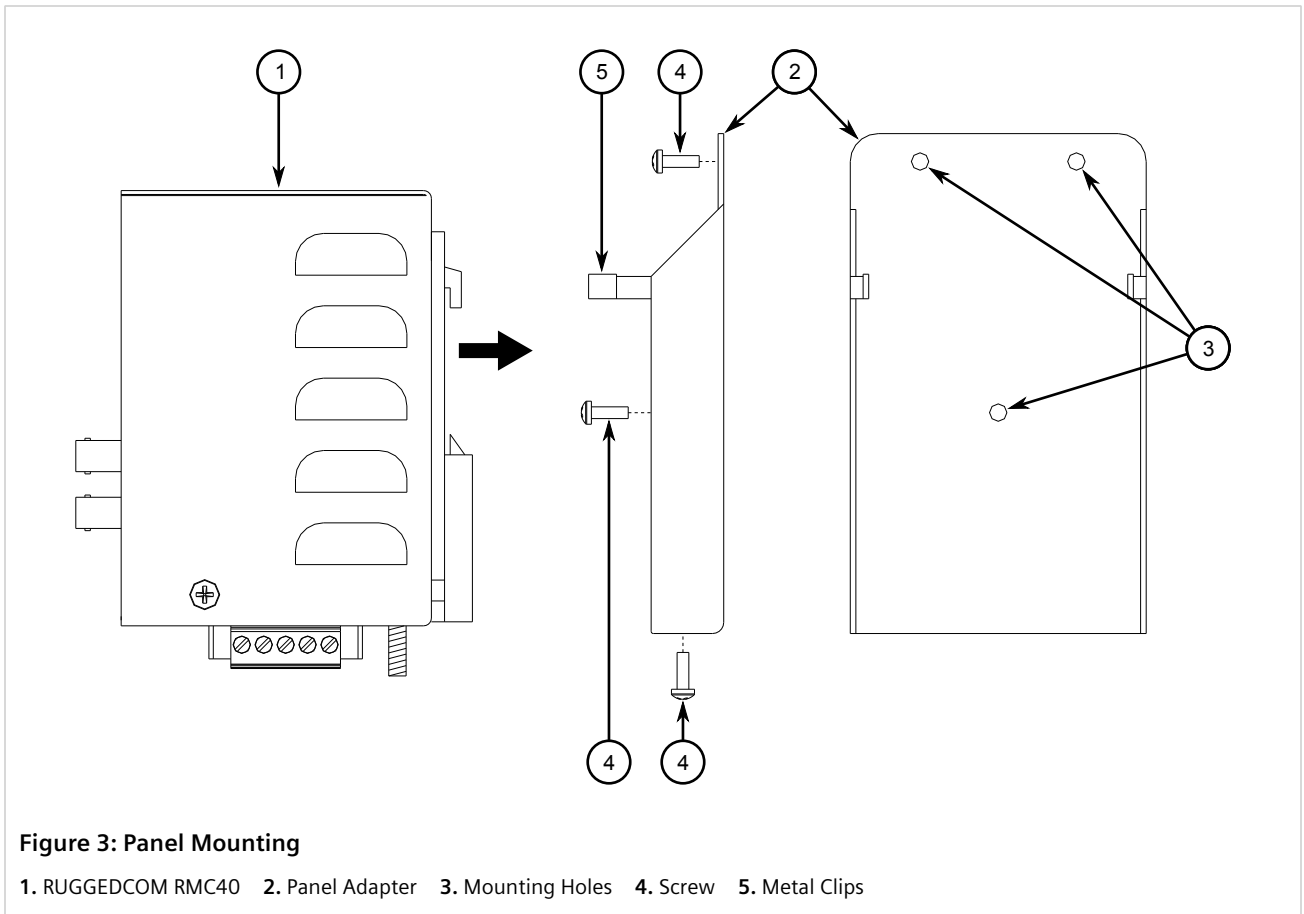

**Figure 3: Panel Mounting**

1. RUGGEDCOM RMC40 2. Panel Adapter 3. Mounting Holes 4. Screw 5. Metal Clips

2. Place the panel adapter against the panel and align the adapter with the mounting holes.
3. Secure the panel adapter using three #6-32 screws.
4. Insert the device into the adapter. Make sure the device is secured between the two metal clips.
5. Install the screw previously removed from the bottom of the panel adapter.

## Section 2.4

# Connecting Power

The RUGGEDCOM RMC40 supports a single integrated high AC/DC or low DC power supply



### NOTE

- For 110/230 VAC rated equipment, an appropriately rated AC circuit breaker must be installed.
- For 125/250 VDC rated equipment, an appropriately rated DC circuit breaker must be installed.
- Use minimum #16 gage copper wiring when connecting terminal blocks.
- Equipment must be installed according to applicable local wiring codes and standards.

- *All line-to-ground transient energy is shunted to the Surge Ground terminal. In cases where users require the inputs to be isolated from ground, remove the ground braid between Surge and Chassis Ground. Note that all line-to-ground transient protection circuitry will be disabled.*



**IMPORTANT!**

*Siemens requires the use of external surge protection in VDSL applications where the line may be subject to surges greater than that for which the device is rated. Use the following specifications as a guide for VDSL external surge protection:*

- *Clamping Voltage: 50 V to 200 V*
- *Insertion Loss: < 0.1 dB at 10 MHz*
- *Peak Surge Current: 10 kA, 8x20μs waveform*

**CONTENTS**

- [Section 2.4.1, "Connecting AC Power"](#)
- [Section 2.4.2, "Connecting DC Power"](#)

Section 2.4.1

## Connecting AC Power


To connect a high AC power supply to the device, do the following:



**CAUTION!**

*Electrical hazard – risk of damage to equipment. Before testing the dielectric strength (HIPOT) in the field, remove the braided ground cable connected to the surge ground terminal and chassis ground. This cable connects transient suppression circuitry to chassis ground and must be removed in order to avoid damage to transient suppression circuitry during testing.*

1. Connect the positive wire from the power source to the positive/live (+/L) terminal on the terminal block.

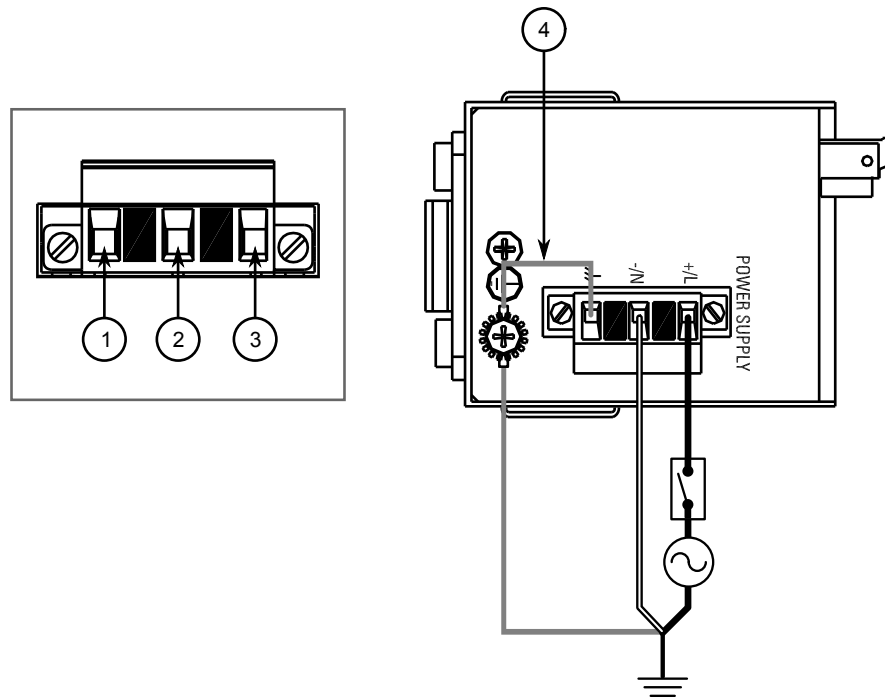

**Figure 4: Terminal Block Wiring**

1. Positive/Live (+/L) Terminal   2. Negative/Neutral (-/N) Terminal   3. Surge Ground Terminal   4. Braided Ground Cable

2. Connect the negative wire from the power source to the negative/neutral (-/N) terminal on the terminal block.
3. Using a braided wire or other appropriate grounding wire, connect the surge ground terminal to the chassis ground connection. The surge ground terminal is used as the ground conductor for all surge and transient suppression circuitry internal to the unit.
4. Connect the ground terminal on the power source to the chassis ground terminal on the device.

#### Section 2.4.2

## Connecting DC Power

To connect a high or low DC power supply to the device, do the following:




### CAUTION!

*Electrical hazard – risk of damage to equipment. Before testing the dielectric strength (HIPOT) in the field, remove the braided ground cable connected to the surge ground terminal and chassis ground. This cable connects transient suppression circuitry to chassis ground and must be removed in order to avoid damage to transient suppression circuitry during testing.*

1. Connect the positive wire from the power source to the positive/live (+/L) terminal on the terminal block.



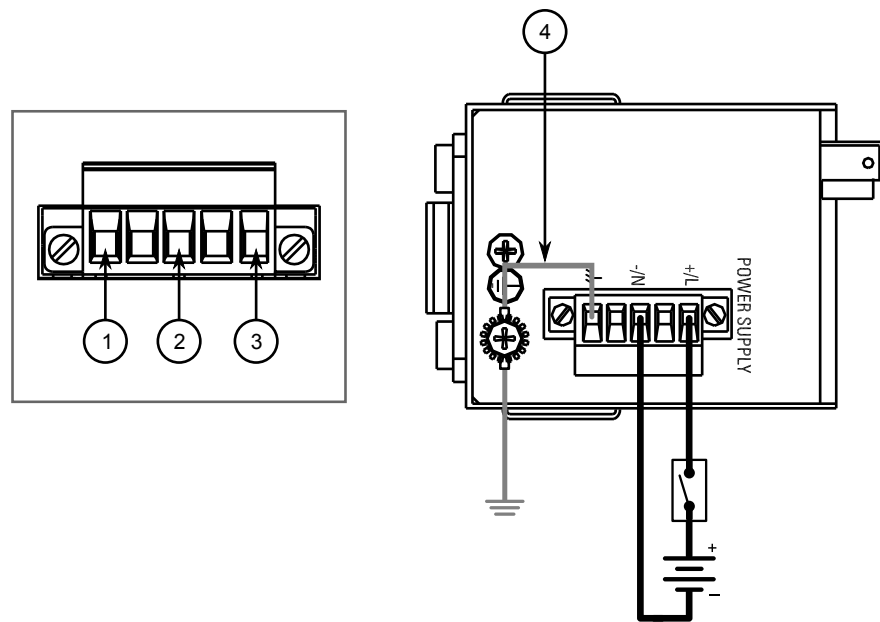

**Figure 5: Terminal Block Wiring**


1. Positive/Live (+/L) Terminal   2. Negative/Neutral (-/N) Terminal   3. Surge Ground Terminal   4. Braided Ground Cable

2. Connect the negative wire from the power source to the negative/neutral (-/N) terminal on the terminal block.
3. Using a braided wire or other appropriate grounding wire, connect the surge ground terminal to the chassis ground connection. The surge ground terminal is used as the ground conductor for all surge and transient suppression circuitry internal to the unit.
4. Connect the ground terminal on the power source to the chassis ground terminal on the device.



# 3 Communication Ports

The RUGGEDCOM RMC40 can be equipped with various types of communication ports to enhance its abilities and performance.

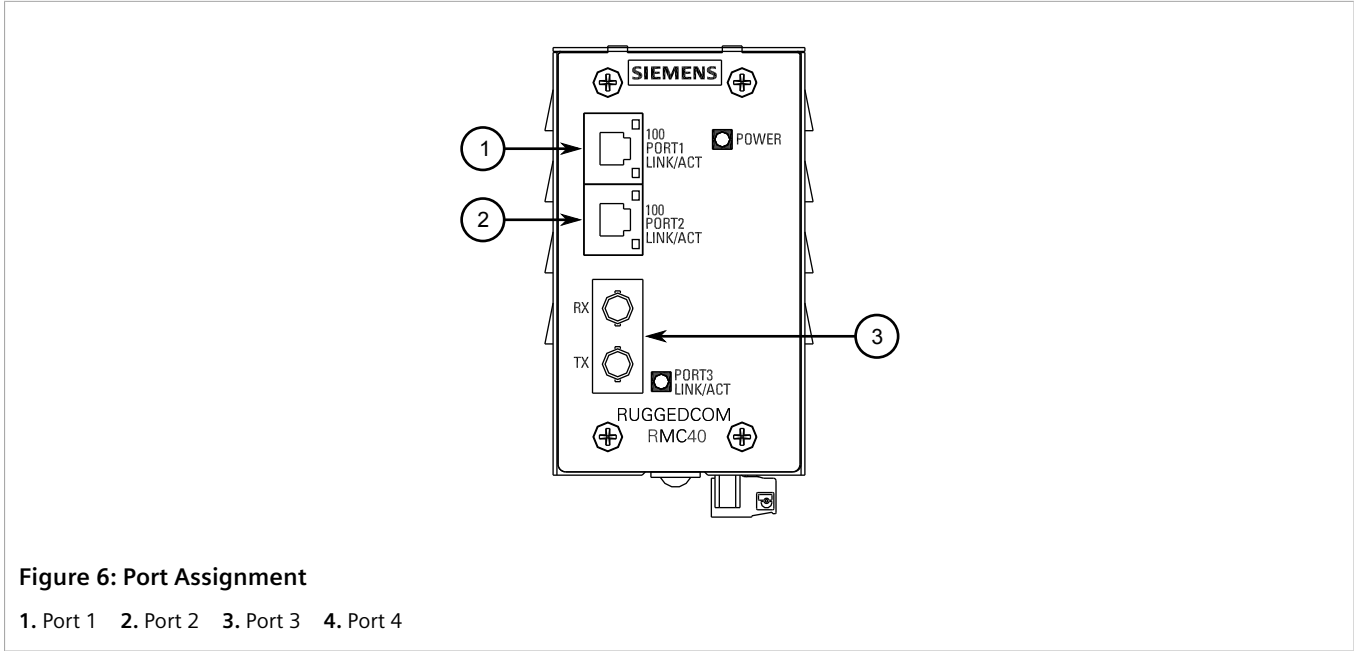

Port	Type
1	Copper Ethernet Port
2	Copper Ethernet Port
3 to 4	Fiber Optic Ethernet Port

<b>CONTENTS</b>
• <a href="#">Section 3.1, "Copper Ethernet Ports"</a>
• <a href="#">Section 3.2, "Fiber Optic Ethernet Ports"</a>

## Section 3.1

# Copper Ethernet Ports

The RUGGEDCOM RMC40 supports two 10/100Base-TX Ethernet ports that allow connection to a standard Category 5 (CAT-5) unshielded twisted-pair (UTP) cable with an RJ45 male connector. The RJ45 receptacles are directly connected to the chassis ground on the device and can accept CAT-5 shielded twisted-pair (STP) cables.



**WARNING!**  
*Electric shock hazard – risk of serious personal injury and/or equipment interference. If shielded cables are used, make sure the shielded cables do not form a ground loop via the shield wire and the RJ45 receptacles at either end. Ground loops can cause excessive noise and interference, but more importantly, create a potential shock hazard that can result in serious injury.*



**IMPORTANT!**  
*For substation applications, do not use the copper Ethernet port to interface with field devices across distances that could produce high levels of ground potential rise (i.e. greater than 2500 V) during line-to-ground fault conditions.*

» LEDs

Each port features a **100** and **Link/Act** LED that indicates the state of the port.

LED	State	Description
100	Yellow	The port is operating at 100 Mbps
	Off	The port is operating at 10 Mbps
Link/Act	Yellow (Solid)	Link established
	Yellow (Blinking)	Link activity
	Off	No link detected

» Pin-Out

The following is the pin-out for the RJ45 male connectors:

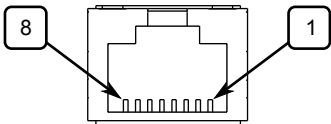


Figure 7: RJ45 Ethernet Port Pin Configuration

Pin	Name	Description
1	RX+	Receive Data+
2	RX-	Receive Data-
3	TX+	Transmit Data+
4	Reserved (Do Not Connect)	
5	Reserved (Do Not Connect)	
6	TX-	Transmit Data-
7	Reserved (Do Not Connect)	
8	Reserved (Do Not Connect)	

» Specifications


For specifications on the available copper Ethernet ports, refer to [Section 4.2, “Copper Ethernet Port Specifications”](#).

## Section 3.2

# Fiber Optic Ethernet Ports


Fiber optic Ethernet ports are available with either MTRJ (Mechanical Transfer Registered Jack), LC (Lucent Connector), SC (Standard or Subscriber Connector) or ST (Straight Tip) connectors. Make sure the Transmit (Tx) and Receive (Rx) connections of each port are properly connected and matched to establish a proper link.

## » Available Ports

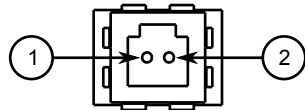


**Figure 8: MTRJ Port**

1. Tx Connector 2. Rx Connector

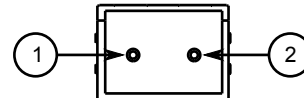


**Figure 9: LC Port**

1. Tx Connector 2. Rx Connector

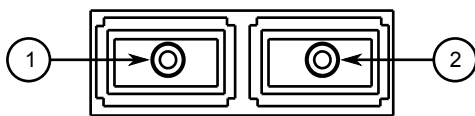

**Figure 10: SC Port**

1. Tx Connector 2. Rx Connector

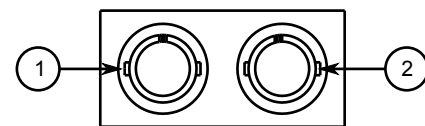

**Figure 11: ST Port**

1. Tx Connector 2. Rx Connector

## » Specifications

For specifications on the available fiber optic Ethernet ports, refer to [Section 4.3, "Fiber Optic Ethernet Port Specifications"](#).



# 4 Technical Specifications

This section provides important technical specifications related to the device and available modules.

## CONTENTS

- [Section 4.1, "Power Supply Specifications"](#)
- [Section 4.2, "Copper Ethernet Port Specifications"](#)
- [Section 4.3, "Fiber Optic Ethernet Port Specifications"](#)
- [Section 4.4, "Supported Networking Standards"](#)
- [Section 4.5, "Operating Environment"](#)
- [Section 4.6, "Mechanical Specifications"](#)
- [Section 4.7, "Dimension Drawings"](#)

### Section 4.1

## Power Supply Specifications

Power Supply Type	Minimum Input	Maximum Input	Internal Fuse Rating <sup>a</sup>	Max. Power Consumption
24 VDC	18 VDC	36 VDC	3.15A (T)	5 W
48 VDC	36 VDC	59 VDC		
HI <sup>b</sup>	88 VDC	300 VDC		
	85 VAC	264 VAC		

<sup>a</sup> (T) denotes time-delay fuse.

<sup>b</sup> This is the same power supply for both AC and DC.

### Section 4.2

## Copper Ethernet Port Specifications

The following details the specifications for copper Ethernet ports that can be ordered with the RUGGEDCOM RMC40.

Speed <sup>c</sup>	10/100Base-TX
Connector	RJ45
Duplex <sup>c</sup>	FDX/HDX

Cable Type <sup>d</sup>	> CAT-5
Wiring Standard <sup>e</sup>	TIA/EIA T568A/B
Maximum Distance <sup>f</sup>	100 m (328 ft)
Isolation <sup>g</sup>	1.5 kV

<sup>c</sup> Auto-negotiating.

<sup>d</sup> Shielded or unshielded.

<sup>e</sup> Auto-crossover and auto-polarity.

<sup>f</sup> Typical distance. Dependent on the number of connectors and splices.

<sup>g</sup> RMS 1 minute.

### Section 4.3

## Fiber Optic Ethernet Port Specifications

The following details the specifications for fiber optic Ethernet ports that can be ordered with the RUGGEDCOM RMC40.



#### NOTE

- All optical power numbers are listed as dBm averages. To convert from average to peak add 3 dBm. To convert from peak to average, subtract 3 dBm.
- Maximum segment length is greatly dependent on factors such as fiber quality, and the number of patches and splices. Consult a Siemens Sales associate when determining maximum segment distances.

Data Rate	Mode	Connector	Cable (µm)	Wavelength (nm) <sup>h</sup>		Transmit Power (dBm)		Receiver Sensitivity (dBm)	Receiver Saturation (dBm)	Distance (km) <sup>h</sup>
				Transmit	Receive	Min	Max			
100 Mbps	MM	MTRJ	62.5/125	1300	1300	-19	-14	-31	-14	2.5
100 Mbps	SM	LC	9/125	1300	1300	-15	-8	-33	-8	15
100 Mbps	SM	SC	9/125	1300	1300	-15	-8	-31	-7	15
100 Mbps <sup>i</sup>	MM	ST	62.5/125	1300	1300	-19	-14	-30	-14	2.5
100 Mbps <sup>i</sup>	MM	SC	62.5/125	1300	1300	-19	-14	-30	-14	2.5
155 Mbps	SM	SC	9/125	1550	1310	-14	-8	-33	0	20
155 Mbps	SM	SC	9/125	1310	1550	-14	-8	-33	0	20
155 Mbps	SM	SC	9/125	1310	1310	-5	0	-35	-3	40
155 Mbps	SM	ST	9/125	1310	1310	-15	-8	-34	-3	15
100 Mbps	MM	ST	62.5/125	1300	1300	-20	-14	-31	-14	2
155 Mbps	SM	LC	9/125	1310	1310	-5	0	-35	0	40
155 Mbps	SM	LC	9/125	1310	1310	0	5	-37	0	90

<sup>h</sup> Typical.

<sup>i</sup> Operating temperature: -10 to 85 °C (14 to 185 °F)



## Section 4.4

## Supported Networking Standards

Parameter	10Base-FL	100Base-FX	Notes
IEEE 802.3	Yes		10Base-T
IEEE 802.3u		Yes	100Base-TX/100Base-FX
IEEE 802.3x	Yes	Yes	Full Duplex, Flow Control

## Section 4.5

## Operating Environment

Parameter	Range	Comments
Ambient Operating Temperature <sup>j</sup>	-40 to 80 °C (-40 to 176 °F)	Measured from a 30 cm (12 in) radius surrounding the center of the enclosure.
Ambient Relative Humidity	5% to 95%	Non-condensing
Ambient Storage Temperature	-40 to 80 °C (-40 to 176 °F)	

<sup>j</sup> Typical. May change based on which fiber optic transceivers are installed. For more information, refer to [Section 4.3, "Fiber Optic Ethernet Port Specifications"](#).

## Section 4.6

## Mechanical Specifications

Weight	0.68 kg (1.5 lbs)
Ingress Protection	IP30
Enclosure	21 AWG Galvanized Steel

## Section 4.7

## Dimension Drawings

**NOTE**

*All dimensions are in millimeters, unless otherwise stated.*

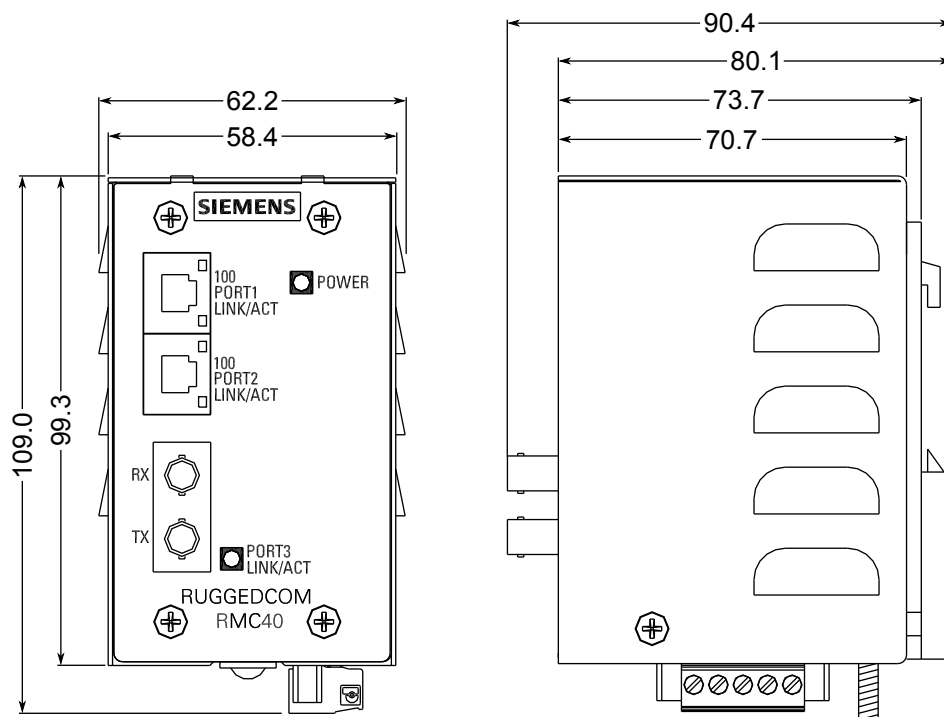


Figure 12: Overall Dimensions

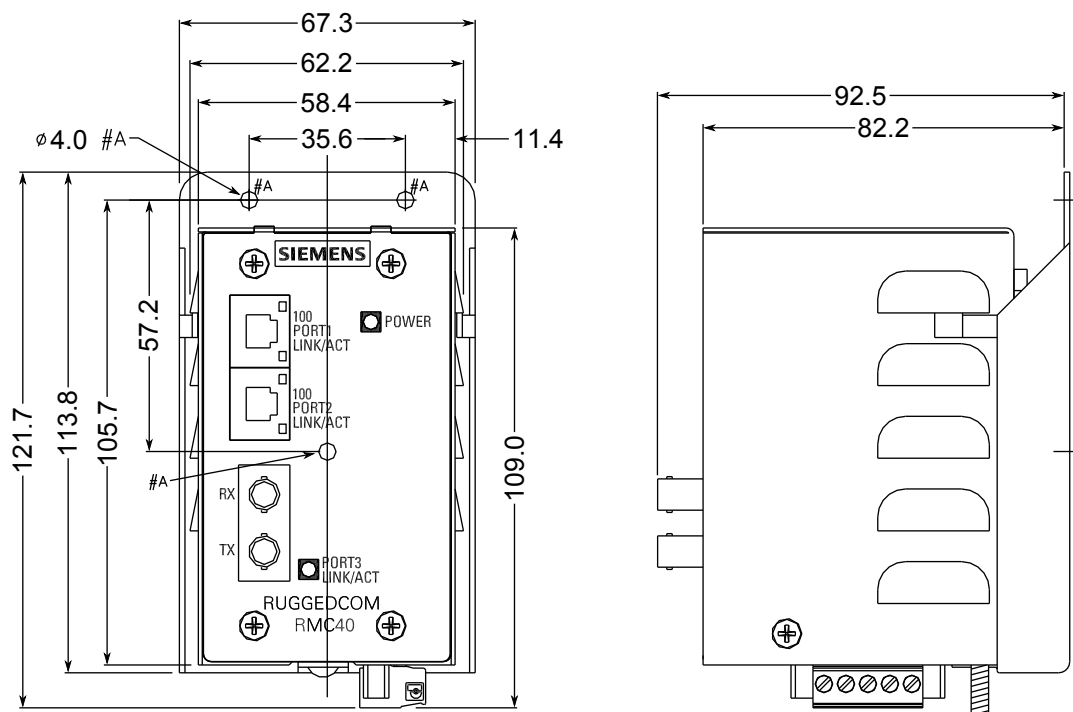


Figure 13: Panel Mount Dimensions

# 5 Certification

The RUGGEDCOM RMC40 device has been thoroughly tested to guarantee its conformance with recognized standards and has received approval from recognized regulatory agencies.

## CONTENTS

- [Section 5.1, "Approvals"](#)
- [Section 5.2, "EMC and Environmental Type Tests"](#)

### Section 5.1

## Approvals

This section details the approvals issued for the RUGGEDCOM RMC40.

## CONTENTS

- [Section 5.1.1, "CSA"](#)
- [Section 5.1.2, "European Union \(EU\)"](#)
- [Section 5.1.3, "FCC"](#)
- [Section 5.1.4, "FDA/CDRH"](#)
- [Section 5.1.5, "ISED"](#)
- [Section 5.1.6, "ACMA"](#)
- [Section 5.1.7, "RoHS"](#)
- [Section 5.1.8, "Other Approvals"](#)

### Section 5.1.1

## CSA

This device is certified by the CSA Group to meet the requirements of the following standards:

- **CSA-C22.2 NO. 60950-1**  
Information Technology Equipment – Safety – Part 1: General Requirements (Bi-National standard, with UL 60950-1)
- **UL 60950-1**  
Information Technology Equipment – Safety – Part 1: General Requirements)

Section 5.1.2

## European Union (EU)

This device is declared by Siemens Canada Ltd to comply with essential requirements and other relevant provisions of the following EU directives:

- **EN 60950-1**  
Information Technology Equipment – Safety – Part 1: General Requirements
- **EN 61000-6-2**  
Electromagnetic Compatibility (EMC) – Part 6-2: Generic Standards – Immunity for Industrial Environments
- **EN 60825-1**  
Safety of Laser Products – Equipment Classification and Requirements
- **EN 55022**  
Information Technology Equipment – Radio disturbance characteristics – Limits and methods of measurement

The device is marked with a CE marking and can be used throughout the European community.



A copy of the CE Declaration of Conformity is available from Siemens Canada Ltd. For contact information, refer to [“Contacting Siemens”](#).

Section 5.1.3

## FCC

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference on his own expense.

Section 5.1.4

## FDA/CDRH

This device meets the requirements of the following U.S. Food and Drug Administration (FDA) standard:

- Title 21 Code of Federal Regulations (CFR) – Chapter I – Sub-chapter J – Radiological Health

Section 5.1.5

## ISED

This device is declared by Siemens Canada Ltd to meet the requirements of the following ISED (Innovation Science and Economic Development Canada) standard:

- CAN ICES-3 (A)/NMB-3 (A)

#### Section 5.1.6

### ACMA

This device meets the requirements of the following Australian Communications and Media Authority (ACMA) standards under certificate ABN 98 004 347 880:

- Radiocommunications (Compliance Labelling – Devices) Notice 2014 made under Section 182 of the Radiocommunications Act 1992
- Radiocommunications Labelling (Electromagnetic Compatibility) Notice 2008 made under Section 182 of the Radiocommunications Act 1992
- Radiocommunications (Compliance Labelling – Electromagnetic Radiation) Notice 2003 made under Section 182 of the Radiocommunications Act 1992
- Telecommunications Labelling (Customer Equipment and Customer Cabling) Notice 2001 made under Section 407 of the Telecommunication Act 1997

The device is marked with an RCM symbol to indicate compliance when sold in the Australian region.



A copy of the Declaration of Conformity is available via Siemens Industry Online Support at <https://support.industry.siemens.com/cs/ww/en/view/89855782>.

#### Section 5.1.7

### RoHS

This device is declared by Siemens Canada Ltd to meet the requirements of the following RoHS (Restriction of Hazardous Substances) directives for the restricted use of certain hazardous substances in electrical and electronic equipment:

- **China RoHS 2**  
Administrative Measure on the Control of Pollution Caused by Electronic Information Products

A copy of the Material Declaration is available online at <https://support.industry.siemens.com/cs/ww/en/view/109738831>.

#### Section 5.1.8

### Other Approvals

This device meets the requirements of the following additional standards:

- **IEEE 1613**  
IEEE Standard Environmental and Testing Requirements for Communications Networking Devices in Electric Power Substations

- **IEC 61850-3**  
Communications Networks and Systems for Power Utility Automation – Part 3: General Requirements

## Section 5.2

## EMC and Environmental Type Tests

The RUGGEDCOM RMC40 has passed the following EMC and environmental tests.

### » IEC 61850-3 Type Tests

Test	Description		Test Levels	Severity Levels
IEC 61000-4-2	ESD	Enclosure Contact	$\pm 8$ kV	4
		Enclosure Air	$\pm 15$ kV	4
IEC 61000-4-3	Radiated RFI	Enclosure Ports	20 V/m	Note <sup>a</sup>
IEC 61000-4-4	Burst (Fast Transient)	Signal Ports	$\pm 4$ kV @ 2.5 kHz	Note <sup>a</sup>
		DC Power Ports	$\pm 4$ kV	4
		AC Power Ports	$\pm 4$ kV	4
		Earth Ground Ports	$\pm 4$ kV	4
IEC 61000-4-5	Surge	Signal Ports	$\pm 4$ kV Line-to-Earth, $\pm 2$ kV Line-to-Line	4
		DC Power Ports	$\pm 2$ kV Line-to-Earth, $\pm 1$ kV Line-to-Line	3
		AC Power Ports	$\pm 4$ kV Line-to-Earth, $\pm 2$ kV Line-to-Line	4
IEC 61000-4-6	Induced (Conducted) RFI	Signal Ports	10 V	3
		DC Power Ports	10 V	3
		AC Power Ports	10 V	3
		Earth Ground Ports	10 V	3
IEC 61000-4-8	Magnetic Field	Enclosure Ports	40 A/m continuous, 1000 A/m for 1 s	Note <sup>a</sup>
			1000 A/m for 1 s	5
IEC 61000-4-29	Voltage Dips and Interrupts	DC Power Ports	30% for 0.1 s, 60% for 0.1 s, 100% for 0.05 s	
		AC Power Ports	30% for 1 period, 60% for 50 periods	
IEC 61000-4-11			100% for 5 periods, 100% for 50 periods	
IEC 60255-5	Dielectric Strength	Signal Ports	2 kV (Fail-Safe Relay output)	
		DC Power Ports	1.5 kV	
		AC Power Ports	2 kV	

Test	Description		Test Levels	Severity Levels
	HV Impulse	Signal Ports	5 kV (Fail-Safe Relay Output)	
		DC Power Ports	5 kV	
		AC Power Ports	5 kV	

<sup>a</sup> Siemens specified severity level.

## » IEEE 1613 EMC Immunity Type Tests



### NOTE

The RUGGEDCOM RMC40 meets Class 2 requirements for an all-fiber configuration and Class 1 requirements for copper ports.

Description		Test Levels
ESD	Enclosure Contact	± 8 kV
	Enclosure Air	± 15 kV
Radiated RFI	Enclosure Ports	35 V/m
Fast Transient	Signal Ports	± 4 kV @ 2.5 kHz
	DC Power Ports	± 4 kV
	AC Power Ports	± 4 kV
	Earth Ground Ports	± 4 kV
Oscillatory	Signal Ports	2.5 kV common mode @ 1MHz
	DC Power Ports	2.5 kV common, 1 kV differential mode @ 1MHz
	AC Power Ports	2.5 kV common, 1 kV differential mode @ 1MHz
HV Impulse	Signal Ports	5 kV (Failsafe Relay)
	DC Power Ports	5 kV
	AC Power Ports	5 kV
Dielectric Strength	Signal Ports	2 kV
	DC Power Ports	1.5 kV
	AC Power Ports	2 kV

## » Environmental Type Tests

Test	Description		Test Levels	Severity Levels
IEC 60068-2-1	Cold Temperature	Test Ad	-40 °C (-40 °F), 16 Hours	
IEC 60068-2-2	Dry Heat	Test Bd	85 °C (185 °F), 16 Hours	
IEC 60068-2-30	Humidity (Damp Heat, Cyclic)	Test Db	95% (non-condensing), 55 °C (131 °F), 6 cycles	
IEC 60255-21-1	Vibration		2 g @ 10-150 Hz	Class 2
IEC 60255-21-2	Shock		30 g @ 11 ms	Class 2

